

Wagner Tuning

Installation Instruction Intercooler - Kit Mini Cooper S R56 FL

**Congratulations on your purchase of our intercooler kit.
We have developed a product that offers the best possible fit for your vehicle.
This information is intended to assist installation in your vehicle.
We recommend fitment by a qualified mechanic.**

Contents:


- Wagner-Intercooler for Mini Cooper S
- 1x Nut M6
- 1x Washer diameter M6x18
- 1x Allen screw M6x16
- 2x NORMA hose clamp 50-70mm

1. Original parts removal:

- Remove both front arch liners
- Remove the front bumper

To remove the original intercooler

- Loosen the screws off the brackets (left/right)
- Loosen the intercooler hose clamps (left/right)
- Pull out the intercooler

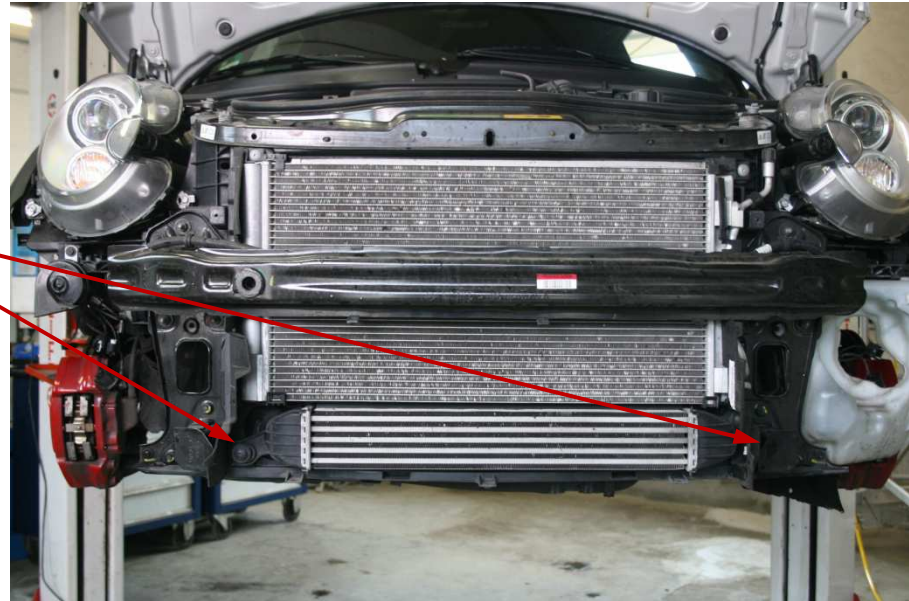

2. Mounting the Wagner Intercooler :

- Install the Wagner Intercooler using the original mounting points
- Attach the charge air hoses using the hose clamps supplied
- For the upper support point drill an 8mm hole in the crossmember, using the supplied nut, washer and bolt attach the intercooler.
- Finally check everything for proper fit.
- Replace the bumper and front arch liners

